

FoldiMix 5L

2 in 1 Auto Incline Folding Smart Treadmill User Manual



IMPORTANT: Read all instructions carefully before using this product. Retain this owner's manual for future reference. The specifications of this product may vary from this photo, subject to change without notice.

Manufacturer: Shenzhen Yile Dynamic Technology Co., LTD.

Address: 1205-1206, Tianliao Building, Tangchang Road, Tanglang Community, Taoyuan Street, Nanshan District, Shenzhen, China

Version: 1.0



MADE IN P.R.C



Activate UREVO App Now
For Longer Warranty &
Smart Features Access

Mode.URTM047

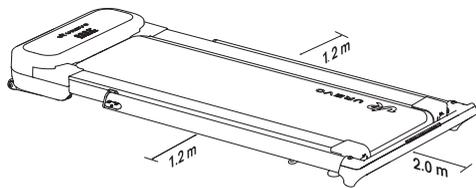


Table of Contents

02	EN	IMPORTANT SAFETY INSTRUCTIONS
03		CUSTOMER SERVICE
04		UREVO APP
05		PRODUCT & ACCESSORIES
06		SPECIFICATION
07		PRODUCT INTRODUCTION
08		HOW TO USE
19		CARE & MAINTENANCE
21		ERROR CODE
22		TROUBLESHOOTING
23		WARRANTY

Important Safety Instructions

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
2. The free area shall not be less than 1.2 metres greater than the training area in the directions from which the equipment is accessed.



3. If any of the adjustment devices are left projecting, they could interfere with the user's movement.

4. Noise emission under load is higher than without load.
5. On airborne noise: $\leq 65\text{dB}$.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
7. Replacement parts that could affect the safe use of the treadmill.
8. **The maximum weight capacity for this product is 136kg. DO NOT EXCEED MAXIMUM WEIGHT CAPACITY.**

Customer Service

IMPORTANT: FOR UREVO ONLY

For damaged or defective product, questions, replacement parts or any other service support, please contact our customer service department by the below methods:

US: services@urevo.com

EU: service_eu@urevo.com

Response Time: 24-48 hours
Emailing us with the **Order ID** will be the best method to receive a response during peak business hours.

Website: www.urevo.com

US Support Hotline:
(1) 844-998-2473

Hours of Operation:
Monday - Friday
9 AM - 12 PM ; 1 PM - 6 PM (PST)
Sat-Sun, 7 AM - 11 AM, 12 PM - 4 PM (PST)

PLEASE DO NOT RETURN THIS PRODUCT WITHOUT ASKING OUR CUSTOMER SERVICE FIRST.

SCAN THIS QR CODE TO GET
THE PRODUCT INSTALLATION
OR MAINTENANCE VIDEOS



UREVO App

Scan Now For The UREVO APP

Unlock More Exciting New Features And Fitness Modes!

App Connection Steps:

Turn on Bluetooth (Phone).
Open the UREVO APP and follow the on-screen instructions to add your device.
Bluetooth connectivity to the walking treadmill to your device:





- Connected:  solid light
- Searching or failed connection:  flashing
- Updating:  quick flashing



Activate UREVO App Now For Longer Warranty & Smart Features Access

Product & Accessories

Please carefully check whether the contents of the package are complete and intact.
If there is any missing and damage, please contact the seller.

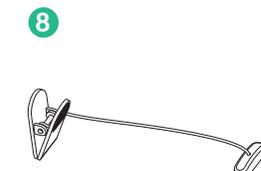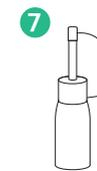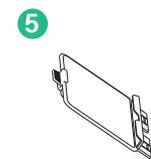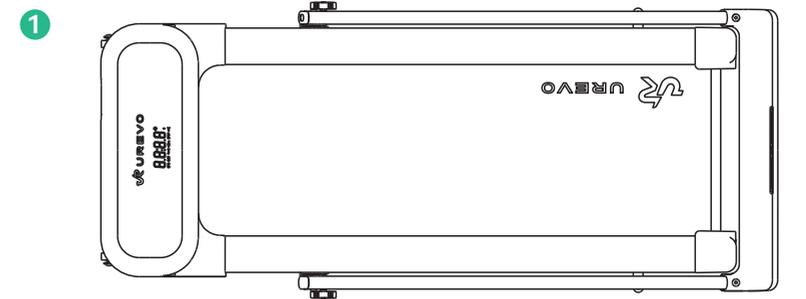

1 Treadmill x 1

2 Remote Controller x 1

3 Power Cord x 1

4 Hex Tool x 1

5 Tablet Mount x 1

6 AAA Size Battery x 2

7 Lubricating Oil x 1

8 Safety Key x 1

9 User Manual x 1



Specification

Product configuration	Detailed parameters
Product dimension (Folded down)	133 x 62.5 x 15.5 cm
	52.4 x 24.6 x 6.1 inches
Product dimension (Folded up)	132 x 62.5 x 111 cm
	52 x 24.6 x 43.7 inches
Running area	40 x 100 cm
	15.8 x 39.4 inches
Gross weight	34 kg
	75 lbs
Net weight	29.6 kg
	65.3 lbs
Maximum speed	12 km/h
	7.6 mph
Minimum speed	1 km/h
	0.6 mph
Maximum load	136 kg
	300 lbs
Rate voltage	220-240V ~
Peak horsepower	3.0 Hp
Rated power	650W

Warning!

Risk of personal injury Keep children under the age of 13 away from machine.

Product Introduction

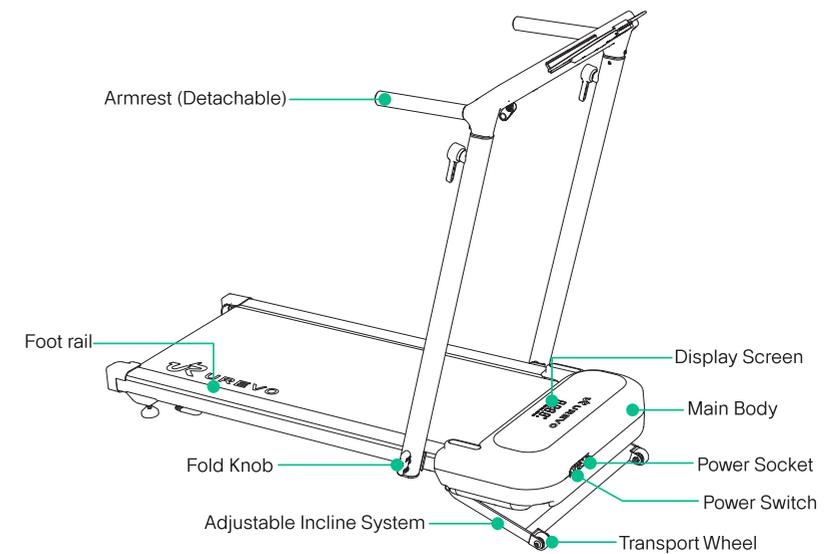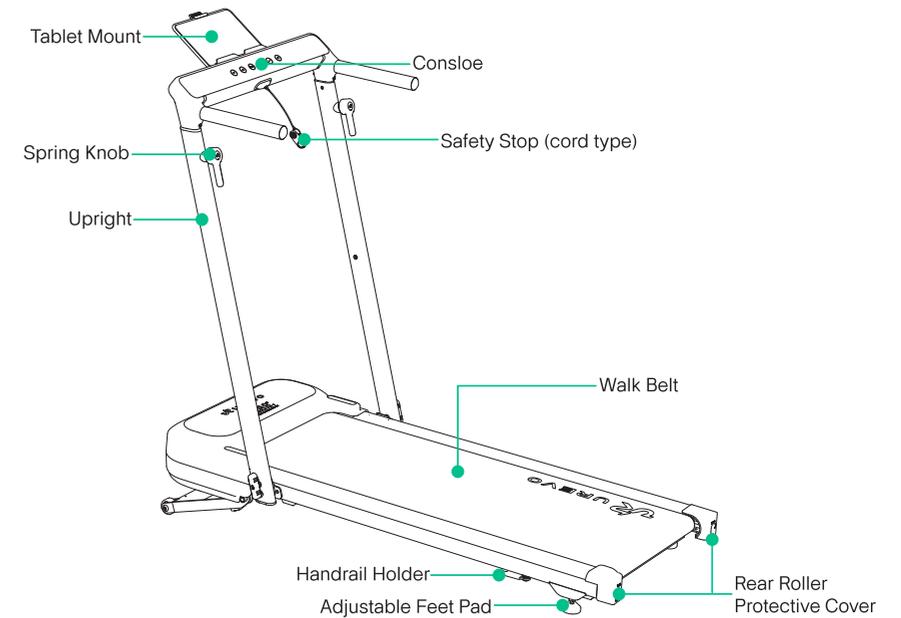


How To Use


Unfolded To Run (Speed range : 1.0 - 12 km/h)

Open the box to take out the treadmill with the related accessories, then place the treadmill on flat ground.

1. Twist folding knobs till loosen as figure show (same operation on both sides).

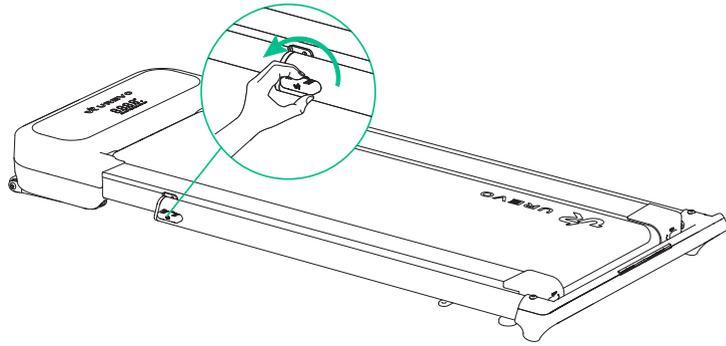


2. Lift up handrail until end position.

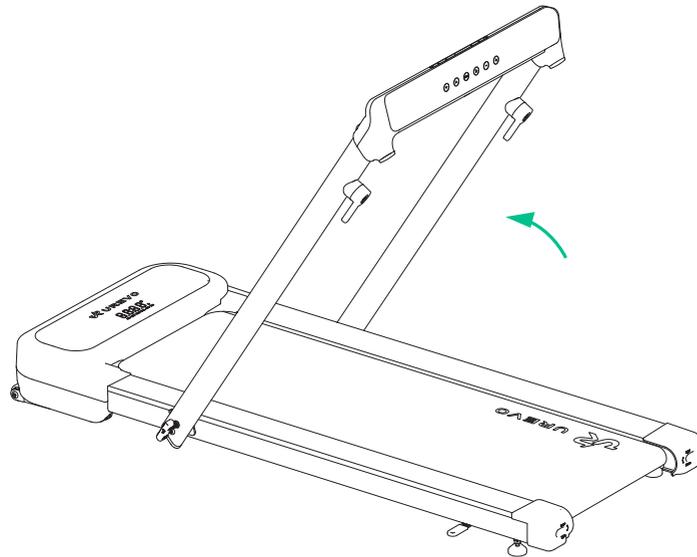


3. Re-twist folding knobs until tightened as figure show and rotate the handrail holders below the foot rail (same operation on both sides).


NOTE: Handrail must be fixed securely before running.

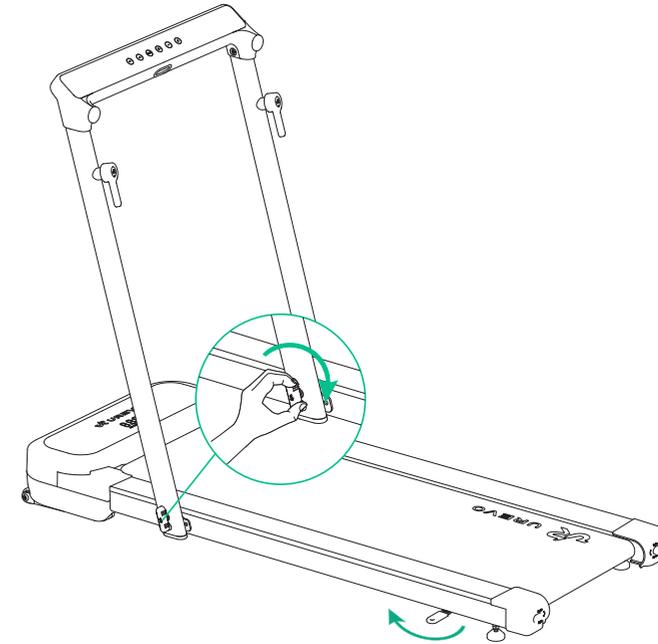

4. Remove the armrest hole covers and store them properly, then rotate and screw in the armrest bars, please screw them in completely.

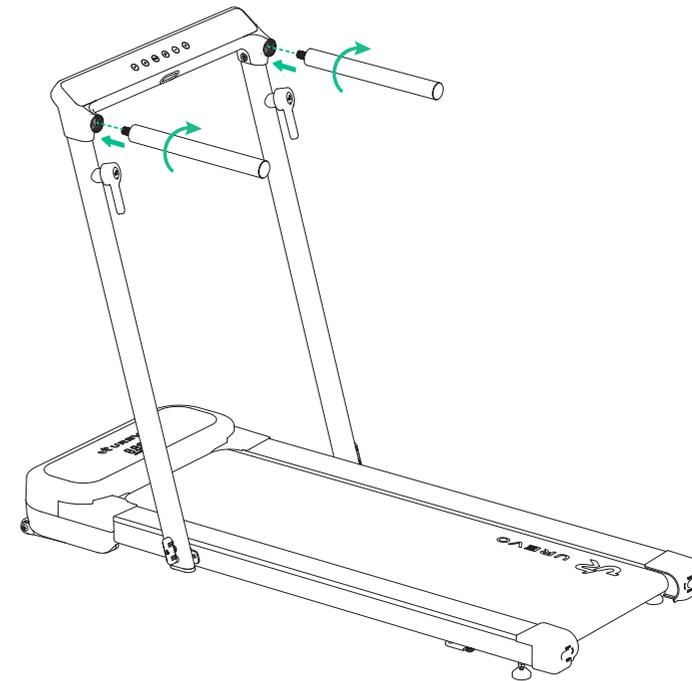


5. Install tablet mount.

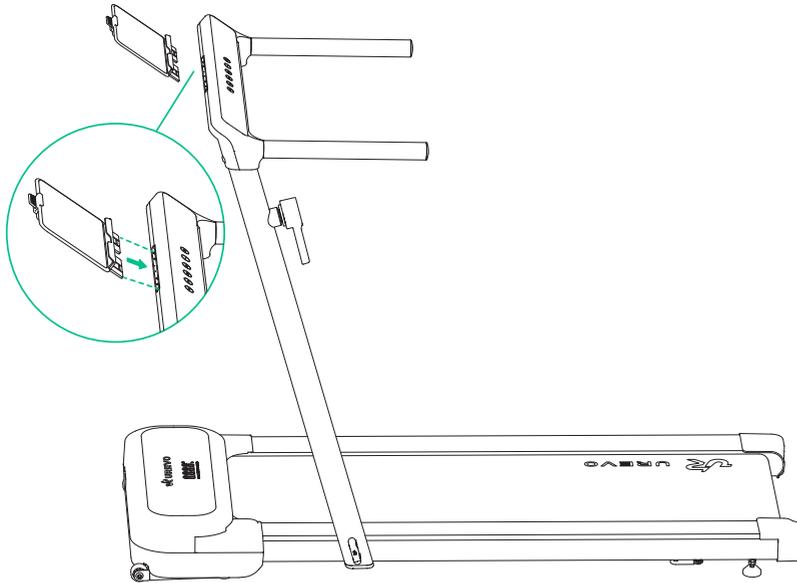


Folded To Walk (Speed range : 1.0 - 6.0 km/h)

1. Detach the tablet mount.
2. Rotate and screw out the armrest bars and store them properly, then put on the armrest hole covers.
3. Rotate the handrail holders out, then twist folding knobs till loose (same operation on both sides).
4. Fold down handbar subassemble under reverse procedure.
5. Re-twist folding knobs until tightened (same operation on both sides).
6. The treadmill is in the walking mode, enjoy walk exercise with remote control.

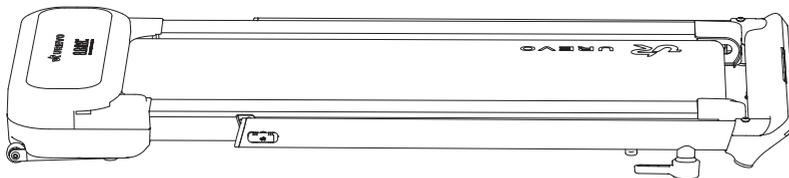

Connect the power


1. Plug in power cord to power connector. Power on and start to running.

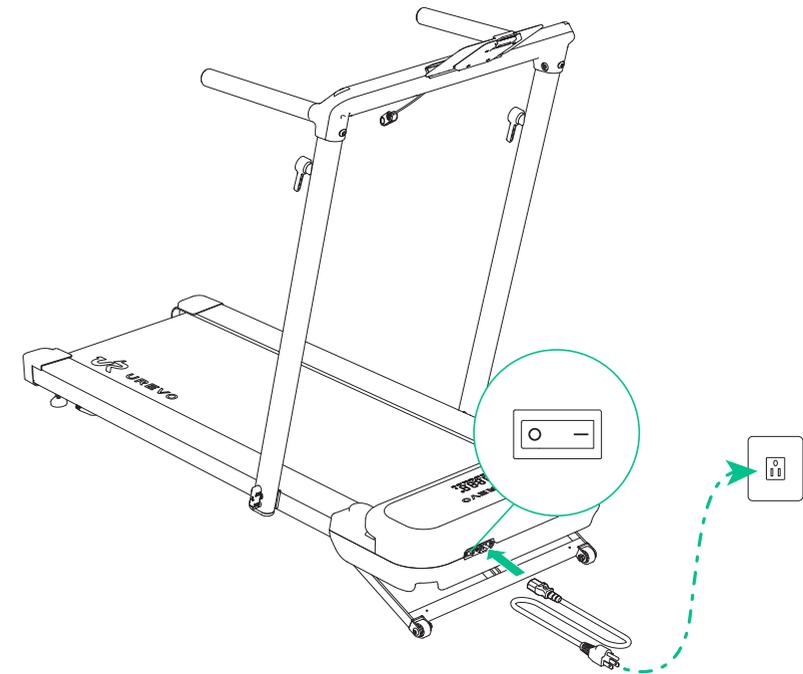

Safety stop (cord type)

If any emergency occurs, treadmill stops automatically and show "E10" when the safety key is pulled out from the console.


NOTE: Find the clip (A) onto the waistband of your clothes, another key (B) magnetic attracted under console.

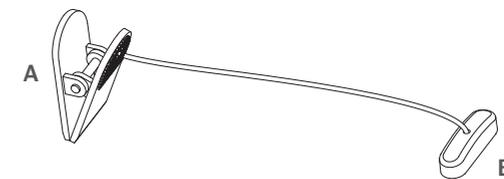


Adjusting the Armrest and console Height

Users can adjust the height of the armrest and console up to a maximum of 23 cm (9 inches). Follow these steps on both sides:


1. Loosen the Spring Knob by turning it COUNTER-CLOCKWISE, then pull it outward.

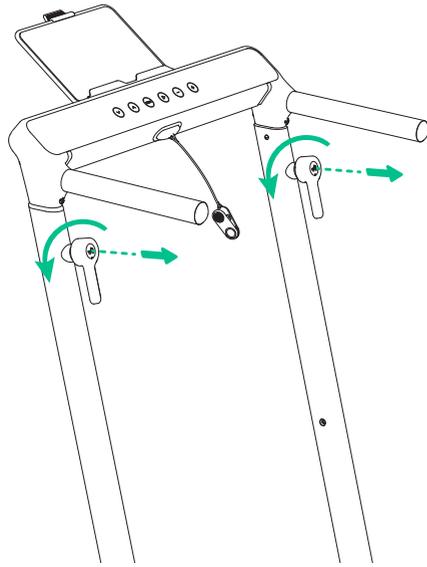

2. Slide the armrest post up or down to the desired position. Ensure the height scales on both armrest post are aligned at the same level and the scale line is slightly higher than the edge of the plastic bushing.

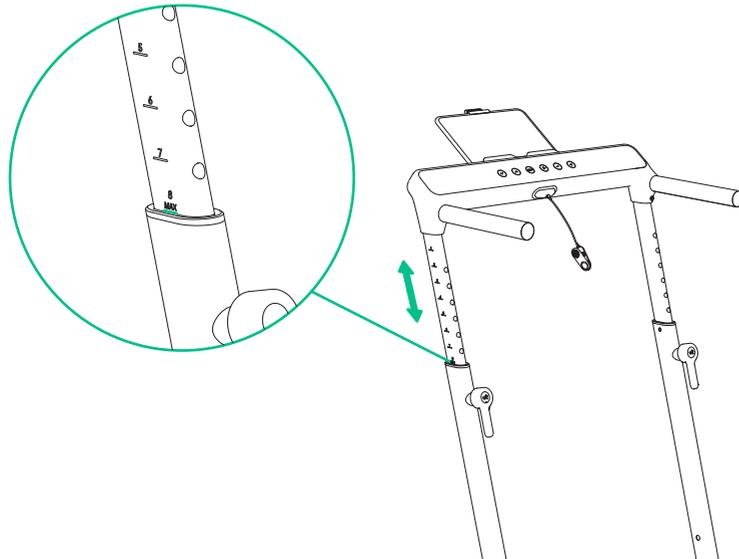



3. Lock the armrest post in place by releasing the Spring Knob and sliding the armrest post up or down until the knob "POPS" into the locked position. For added safety, tighten the Spring Knob CLOCKWISE.

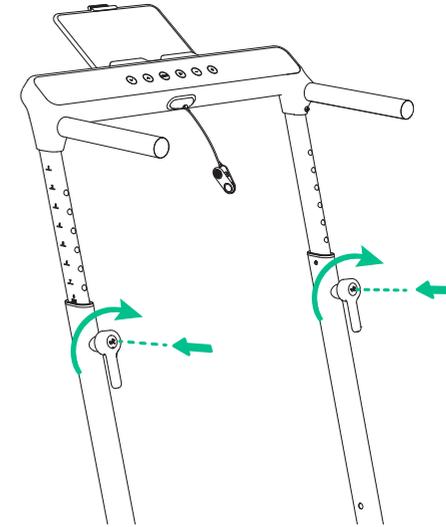

NOTE: During adjustment, the MAX line must never exceed the edge of the plastic bushing.

Auto incline feature introduction

- 9 incline levels .Adjustable gear: 9 gears.
- Change the incline of working treadmill as desired.

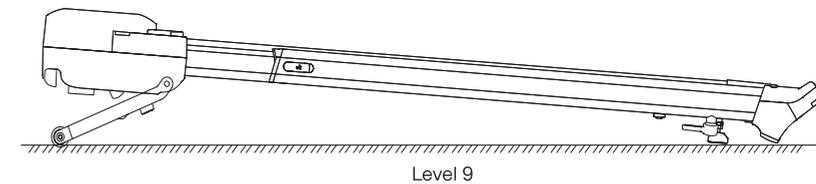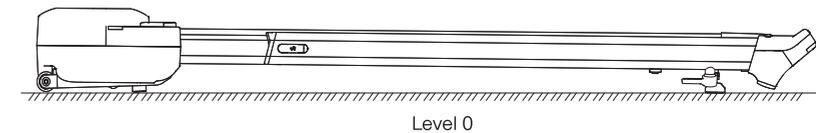


• Friendly reminder of Auto incline features

- » Incline level should be set to " Zero " when you are finished exercising.
- » Perform POST (Power On Self Test) to identify incline level and back to " Zero" automatically.

Transportation


1. If transportation is needed, please unplug power cord and tablet mount before lifting the terminal of treadmill.
2. Easy to transport treadmill with bottom transportation wheel assists, like a wheelbarrow.

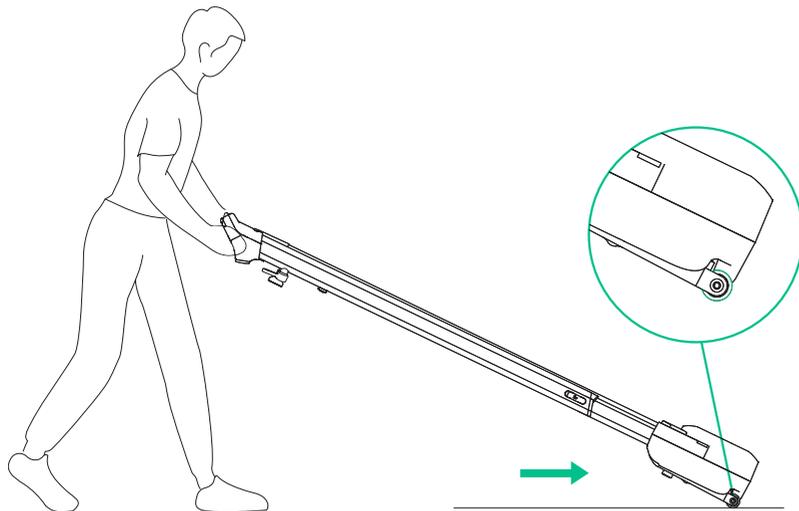

NOTE: Before move and storage, please make sure the power switch is into off and power cord is unplugged.

Operation Of Remote Control

NOTE: Ensure that the walking treadmill is powered on and the remote control is installed with batteries.

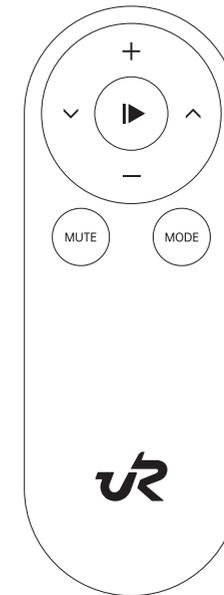

Buttons	Operation	Functions & Note
▶	Short press	Start the walking treadmill.
	Long press for 2"	Stop the walking treadmill. Display show "End" and walking belt will slow down until completely stop. Display off if End status longer than 10 minutes.
	Short press (in start mode)	Pause. Take a pause while exercising, walking belt slow down until completely stop, display show "PAU" and the workout data will be preserved, re-press this button to resume. Display off if pause longer than 10 minutes.
^	Short press	Increase incline level.
v	Short press	Decrease incline level.
+	Short press	Accelerate speed
	Long press	The speed will be increased continuously.
-	Short press	Decelerate speed
	Long press	The speed will be decreased continuously.
MUTE	Short press	Muted buzzer voices.
MODE	Short press	Customize countdown workout programs (like as: Time; Distance; Calories)

Display Screen Of Treadmill



Name	Range	Display
SPD	1.0-12 km/h	Displays the speed of walking belt.
DIST	00.00-99.99 km	Displays the distance that you have walked or ran.
TIME	00--99.59 minutes	Displays the elapsed time.
KCAL	0-6553 Kcal	Displays the approximate number of calories you have burned.
STEP	0-9999	Displays the steps.(For reference only)
INC	0-9 level	Displays the incline level of your setting.
®	ERP indicator light	Standby mode, indicator E flashing slowly.

Tips: Workouts and exercise data displayed in a rotating carousel.

Standby Mode

When the treadmill is paused during operation, if the pause is not released within 10 minutes, it will return to the standby interface "0000", and at the same time, the previous operation data will be reset to zero; if there is no operation for 10 minutes on the standby interface, it will enter the sleep mode; in the sleep mode, pressing any key will return to the standby interface "0000".

Console



Button	Operation	Function
	Short press	Decrease incline level.
	Short press	Increase incline level.
	Short press	The walking mode provides three running models, and the running mode provides six running models. Walking mode. P01-P03, Running mode. P01-P06
	Short press	Start the walking treadmill.
	Long press for 2"	Stop the walking treadmill. Display show "End" and walking belt slow down until completely stop. Display off if End status longer than 10 minutes.
	Short press (in start mode)	Pause. Take a pause while exercising, walking belt slow down until completely stop, display show "PAU" and the workout data will be preserved, re-press this button to resume. Display off if pause longer than 10 minutes.
	Short press	Decelerate speed
	Long press	The speed will be decreased continuously.
	Short press	Accelerate speed
	Long press	The speed will be increased continuously.

Treadmill Mode

	Segment	1	2	3	4	5	6	7	8	9	10
	Time	180 sec									
P01 (Fat Burn)	Incline	0.0	1.0	2.0	3.0	4.0	5.0	6.0	6.0	5.0	4.0
	Speed (km/h)	1.5	2.4	3	3.9	4.5	5.4	6	5.4	4.5	3.9
P02 (Hill Climb)	Incline	0.0	1.0	3.0	4.0	6.0	8.0	9.0	9.0	6.0	4.0
	Speed (km/h)	1.5	3.0	4.5	3.9	3.0	2.4	1.5	2.4	3.0	3.9
P03 (take a walk)	Incline	0.0	1.0	2.0	3.0	2.0	1.0	2.0	3.0	2.0	1.0
	Speed (km/h)	1.5	2.1	2.4	2.4	2.7	2.7	3.0	3.0	2.7	2.7
P04 (Fast fat burning)	Incline	0.0	1.0	2.0	3.0	3.0	2.0	2.0	1.0	1.0	0.0
	Speed (km/h)	3.2	10.4	9.6	8.8	8.8	9.6	9.6	10.4	10.4	6.4
P05 (morning jog)	Incline	0.0	1.0	2.0	3.0	3.0	2.0	2.0	1.0	1.0	0.0
	Speed (km/h)	3.2	8.0	7.2	7.2	6.4	6.4	7.2	8.0	8.0	3.2
P06 (explosive running)	Incline	0.0	0.0	2.0	4.0	5.0	6.0	7.0	8.0	9.0	0.0
	Speed (km/h)	3.2	12	11.4	10.4	9.9	9.6	9.3	9.0	8.6	6.4

Care & Maintenance

Symptom: walk belt off centered or slips.

Centering walk belt process as follow :

1. Power off treadmill and unplug the power cord .
2. Manual centering process as follow:
 - If the walk belt has shifted to left, use the hex tool to turn the left idler roller screw clockwise $\frac{1}{4}$ of a turn (refer to figure 1).
 - If the walk belt has shifted to right, use the hex tool to turn the right idler roller screw clockwise $\frac{1}{4}$ of turn (refer to figure 2).
3. Treadmill MUST work 1-2minutes. Repeat manual centering process untill the walk belt is centered.

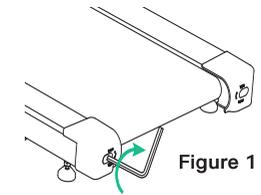


Figure 1

Belt slip correcting process as follow :

1. Power off treadmill before operation.
2. Using the hex tool, turn both idler roller screws clockwise $\frac{1}{2}$ of turn (refer to figure 3).
3. After corrected, please attempts to walking 1-2 minutes under 3-4 km/h speed setting. Repeat until the walk belt is properly tightened.

Note: The Tread-belt should not be adjusted too tightly, otherwise it will be damaged.

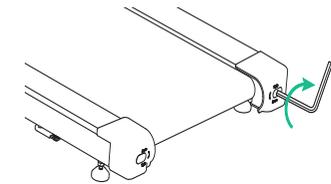


Figure 2

Attentions

1. To prevent any injury, don't place any debris around treadmill before maintenance process.
2. MUST use associated hex tool.
3. Take care at maintenance process.
Do not pinch fingers.

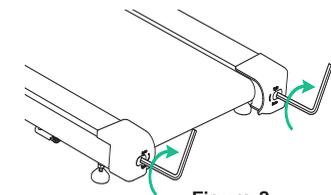



Figure 3

Error Code

When error occurs, error warning indicator will light up and display its error code.


Belt lubrication process, follow instruction below to lubricate belt.

1. Power off treadmill and unplug power cord.
2. Using the hex tool, turn both idler roller screws counterclockwise till belt loosen and lifts easily.
Tips: please mark down hex tool rotating cycles when loosen belt, which use for adapting belt tension after lubrication process.
3. Lifting edges of belt and spraying lubrication oil at center of walk platform evenly. Not necessary to apply spray lubrication oil on entire walk platform.
4. Lubrication oil volume Per time of maintenance: 5-10mL.
Attention: it would causes of belt slip if spray too much.
5. Using the hex tool, turn the both idler screws clockwise as previous mark down number of turns untill walk belt tighten properly.
6. Power on treadmill and workout for a few minutes, in order to spread lubrication oil to whole belt surface evenly.
Attention: please hold handrail when workout at 6 km/h setting.
Lubrication frequency: High recommend 200 kms Per time.

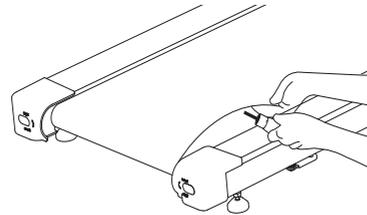

Treadmill cleaning.

1. Power off treadmill and unplug power cord before cleaning.
2. Wipe and clean with damp cloth, Do not cleaning with acidic or caustic detergents.
3. Do not clean opposite of walk belt.
4. Its normal few black powders residual under treadmill after long working.

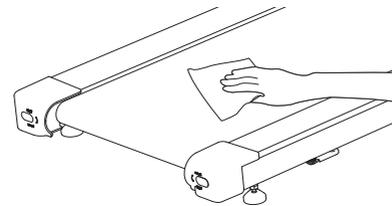

Error Code	Fault Analysis	Resolutions
E01	Communcation interrupted between contoller and numeric display	Unscrew motor hood and verify connection between controller and numeric display. Please contact with after sale service if E01 code has not been eliminated. Notice: Always power off and unplug power cord before processing.
E02	Open circuit of the motor	1. User confirms whether the motor wires are securely plugged in the lower control board.If the connection is loose or contact is poor, tighten the terminal and reinsert it into the controller. 2. Please contact with after sales service if problem CAN NOT solved by above process.
E04	Over current protection	1. Due to user over limited 136Kg. 2. Open to check any foreign objects blocked moving parts. (such as: drive motor, idler roller, driver roller, walking belt) 3. Walking belt is overtightened or lack of lubricant. (please see detail chapters relate to belt tension and lubricant process)
E05	The communication fault between the upper meter and the upper control	Disconnect the transmitting or receiving wire between the shuttle (upper meter) and the upper control (the display screen of the treadmill)
E06	Controller self-check error	Replace the lower control board.
E10	The safety lock has fallen off. No safety lock signal is detected for 1 second	Check whether the safety lock is inserted properly or whether the safety lock is damaged, insert it correctly or replace the safety lock.
E11	Input voltage abnormal	Confirm that the external power supply specifications meet the requirements of the manual.
E12	The gyroscope is faulty	Fix the handrails to the designated position and restart the machine by turning the power switch off and on.
E13	Overtemperature protection	Turn off the machine and let it sit for a while to lower its temperature.
E14	Motor power phase loss	Check the motor connection lines and unplug and replugthe motor connection lines.
E15	Motor short circuit protection	Check the motor connection lines and unplug and replug the motor connection lines.

Not only error code appeared but also built in buzzer alarm, Once error code and alarm happens, you MUST stop workout immediately, Please contact with after sales service if problem CAN NOT be solved after restart.

Troubleshooting

Problem	Fault Analysis	Resolutions
No working	<ol style="list-style-type: none"> 1. Power rock switch malfunction 2. Power supply interrupted. 3. Power cord damaged. 	<ol style="list-style-type: none"> 1. Replace new power rock switch if it doesn't light on. 2. Make sure that power cord is plugged into properly grounded outlet. 3. Replace new power cable.
Walking belt slips	Walking belt loosens	Tighten walking belt tension with hex tool. (See details of chapter)
Remote control does not work	<ol style="list-style-type: none"> 1. Incorrect use of default 2. Battery power shortage. 3. Remote control malfunction 	<ol style="list-style-type: none"> 1. Replace new battery cells. 2. Replace new remote control.
Friction noise	Walking belt off center.	See details of chapter.

Warranty

MANUFACTURER'S LIMITED WARRANTY

UREVO warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with UREVO Owner's Manual. UREVO's obligation under this warranty applies to the following:

COMPONENT LENGTH OF WARRANTY

Structural Frame 1 year For Home Use Only
All Other Components 90 days For Home Use Only

Exclusions from Warranty Coverage:

UREVO does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, any product failure, product malfunction, or damages attributable to:

1. Improper installation and/or failure to abide by UREVO's installation guidelines;
2. Use of this product beyond normal home use, or in an application for which it was not designed;
3. Cosmetic items such as scratches, dents or discolorations;
4. Damage caused by normal wear and tear, vandalism, accidental or by animals;
5. Any act of Nature (such as fire, flooding, snow, ice, hurricanes, earthquakes, lightnings or other

natural disasters), environmental condition (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.);

6. Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to among other things, flake, chalk, accumulate dirt or stains.
7. Improper operation, alteration, handling, storage, abuse or neglect of the products.

UREVO , using its sole discretion, will either repair or replace free of charge any part(s) proven to be defective under normal home use. Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product's warranty. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.

When ordering replacement parts please have the following information ready:

1. Order Number
2. Description of Parts
(Adding photos or videos would be helpful)
3. Part Number
4. Date of Purchase