


US

Model.URTM041

Spacewalk E1L

Walking Treadmill

USER MANUAL

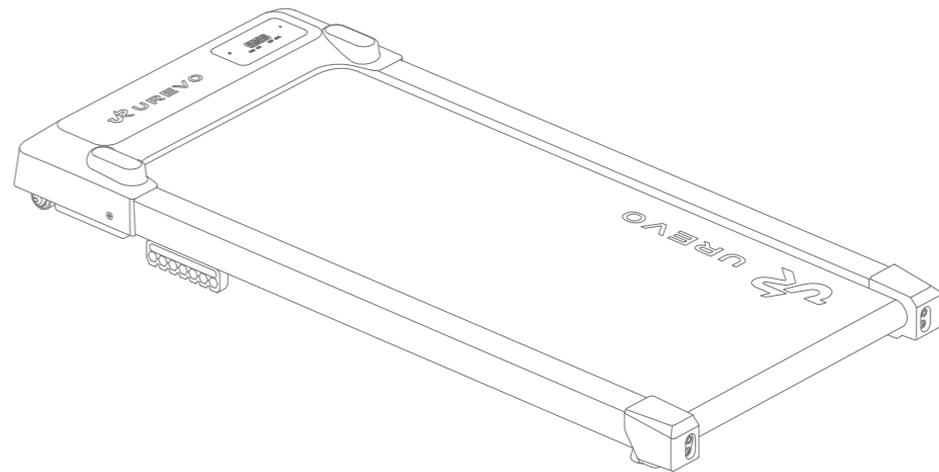

IMPORTANT: Read all instructions carefully before using this product. Retain this owner's manual for future reference.

The specifications of this product may vary from this photo, subject to change without notice.

Manufacturer: Shenzhen Yile Dynamic Technology Co., LTD.

Address: 1205-1206, Tianliao Building, Tangchang Road, Tanglang Community, Taoyuan Street, Nanshan District, Shenzhen, China

Version: 2.0



MADE IN CHINA

 UREVO

 
 
 
 
 
 


TABLE OF CONTENTS

02 CUSTOMER SERVICE

03 WORKOUT WITH FITNESS APP

04 IMPORTANT SAFETY INSTRUCTIONS

07 SAFETY NOTICE

10 SPECIFICATION

11 PRODUCT AND ACCESSORIES

12 PRODUCT INTRODUCTION

13 BEFORE START AND STORAGE

15 FUNCTION MENU

16 REMOTE CONTROL

17 ERROR CODE

18 TROUBLESHOOTING

19 CARE AND MAINTENANCE

21 WARRANTY

1 CUSTOMER SERVICE

IMPORTANT: FOR UREVO ONLY

For damaged or defective product, questions, replacement parts or any other service support, please contact our customer service department by the below methods:

services@urevo.com

Response Time: 24-48 hours

Emailing us with the **Order ID** will be the best method to receive a response during peak business hours.

Website: www.urevo.com

US Support Hotline: (1)844-998-2473

Hours of Operation:

Monday – Friday : 9 AM – 12 PM; 1 PM – 6 PM (PST)

PLEASE DO NOT RETURN THIS PRODUCT WITHOUT ASKING OUR CUSTOMER SERVICE FIRST.

SCAN THIS QR CORD TO GET THE PRODUCT INSTALLATION OR MAINTENCE VIDEOS



2 WORKOUT WITH FITNESS APP

1. Scan QR code to download and install Urevo Fitness APP.



2. Free of charge to create membership and log in.

3. Bluetooth connectivity walking treadmill to your device.

• Connected:  solid light

• Searching or failed connection:  flashing

• Updating:  quick flashing

4. Enjoy your exercises.

3 IMPORTANT SAFETY INSTRUCTIONS

DANGER - To reduce the risk of electric shock:

1. Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.

2. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

3. Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.

4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.

6. Do not carry this appliance by supply cord or use cord as a handle.

7. Keep the cord away from heated surfaces.

8. Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.

9. Never drop or insert any object into any opening.

10. Do not use outdoors.

11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

12. Caution - To reduce the risk of injury from moving parts - Unplug before servicing.

13. Warning - To reduce the risk of Electric shock - Unplug before cleaning or servicing.

14. Warning - Risk of personal injury - Keep children under the age of 13 away from walking treadmill.

15. To disconnect, turn all controls to the position, then remove plug from outlet.

16. Connect this appliance to a properly outlet only. See grounding instructions.

17. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities,

or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this walking treadmill.

18. The maximum weight capacity for this product is 242lbs/110kg. DO NOT EXCEED MAXIMUM WEIGHT CAPACITY.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS:

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

FCC STATEMENT:

Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
(3) Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and

4 SAFETY NOTICE

receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with RSS210 of Industry Canada. Cet appareil se conforme à RSS210 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Radiation Exposure Statement: The product comply with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual.

The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Déclaration d'exposition aux radiations : Le produit est conforme aux limites d'exposition pour les appareils portables 06

RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.

Le produit est sûr pour un fonctionnement tel qu'il est décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible et que le fonctionnement est disponible.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.




⚠ Please keep a rear distance of 100 cm or more.




⊗ Please do not stand up on the walking treadmill when it is under auto calibration situation (during 4s after starting).




⚠ Please choose sneaker.

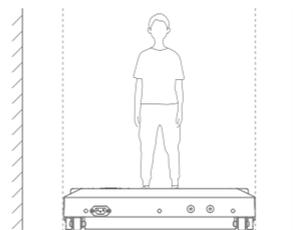


⚠ Please keep a distance of 0.6 meters or more for both sides.

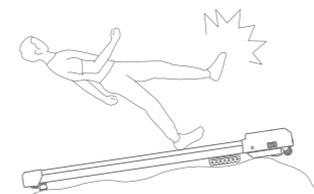


⊗ Using on uneven ground is prohibited.

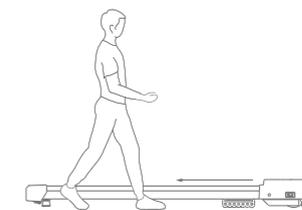


⊗ It is strictly forbidden to walk up and down the walking treadmill while walking.

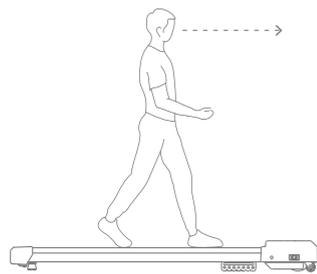


⚠ Please keep your sight horizontal to avoid dizziness.

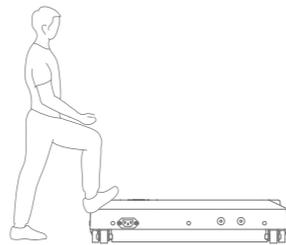


⊗ Trampling the treadmill lid is prohibited.

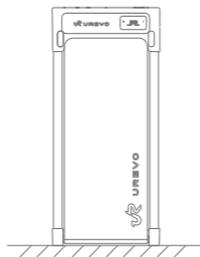


⊗ Do not storage as stand up.

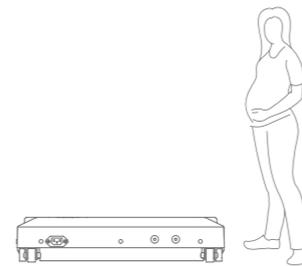


⊗ Be carefully of elderly and pregnant woman use .

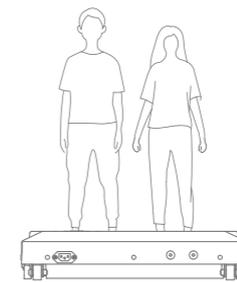


⊗ Single person walking only.

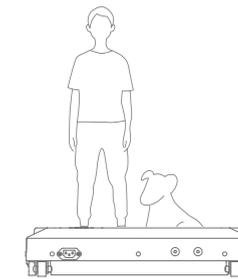

⊗ Do not walking with pets.

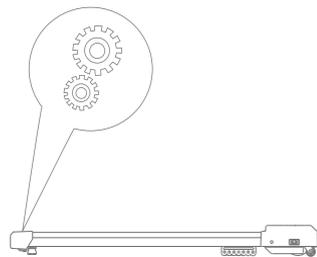


⚠ Take care clothing or others debris drawn into appliance when working.

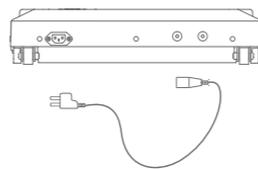


⚠ Please unplug power cord when not in use.




⊗ Do not storage as side stand.

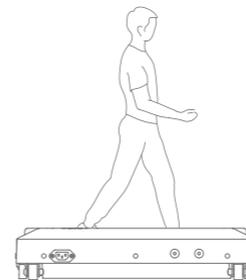

⊗ Do not transverse motion.

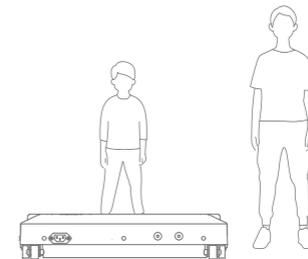

⚠ Children use MUST be under supervised.

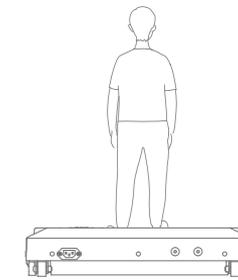

⊗ Do not backward motion.


5 SPECIFICATION

Performance indicators	Detailed parameters	Performance indicators	Detailed parameters
Product dimension	119 x 49 x 12 cm	Minimum speed	0.6 mph
	46.8 x 19.3 x 4.8 inch		
Walking Area	38 x 90 cm	Maximum speed	4.0 mph
	15 x 35.43 inch		
Gross weight	19.5 KG	Rate voltage	110 - 120V ~
	42.99 Lbs		
Net weight	16.6 KG	Maximum load	120 KG
	36.59 Lbs		265 Lbs
Peak horsepower	2.5Hp	Rated power	550 W

6 PRODUCT AND ACCESSORIES

Please carefully check whether the contents of the package are complete and intact. If there is any missing and damage, please contact the seller.


Accessories

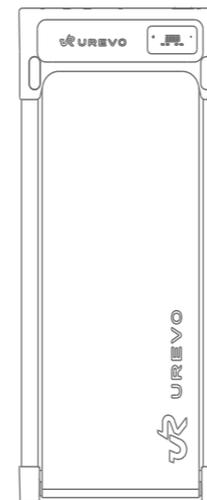

Walking treadmill x 1



Remote Control x 1

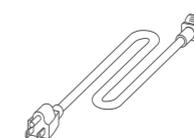

Power Cord x 1



Lubricating Oil x 2




Hex Tool x 1




User Manual x 1

7 PRODUCT INTRODUCTION

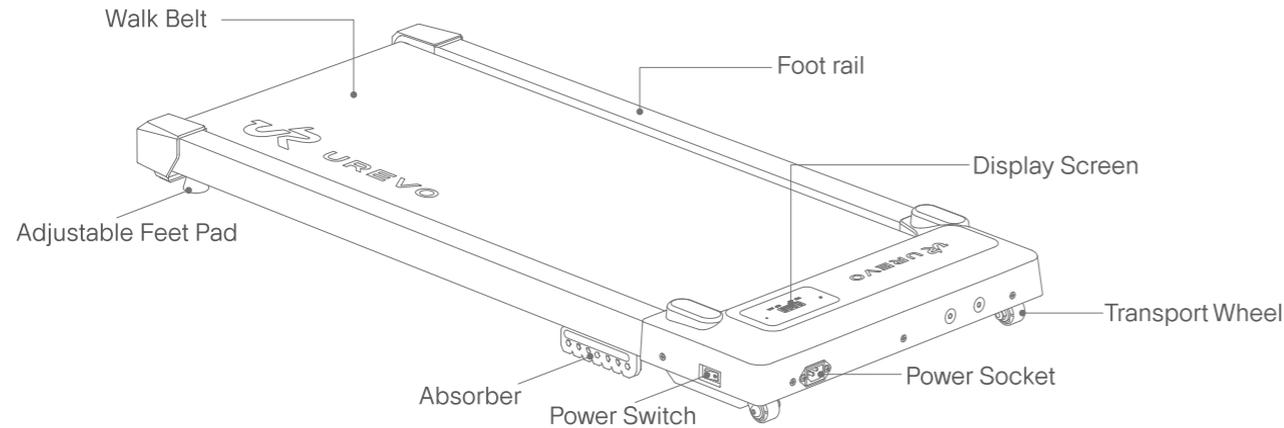


8 BEFORE START AND STORAGE

- Take out appliance from packages.

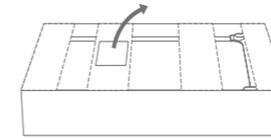


1. Unbox and take out accessory box.

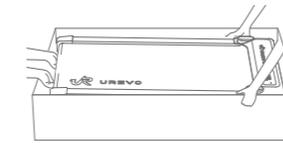

- Lift out appliance and place at flat surface.

Attention: 2-3 persons assist is necessary.

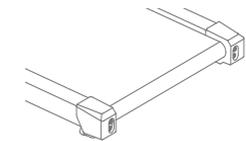


3. Its normal that visible welding marks residual on walk belt.

- Transportation




1. If transportation needs, unplug power cord and lifting the terminal of appliance.

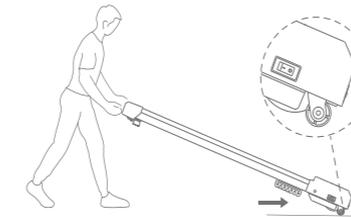


2. Easy to transport appliance with bottom transportation wheel assists, like as wheelbarrow.

- Connect the power

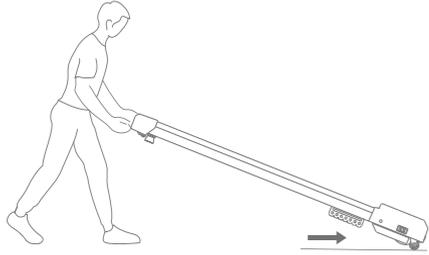

1. Choose flat ground to place the Walking Treadmill. Do not place it on thick and soft cushion.

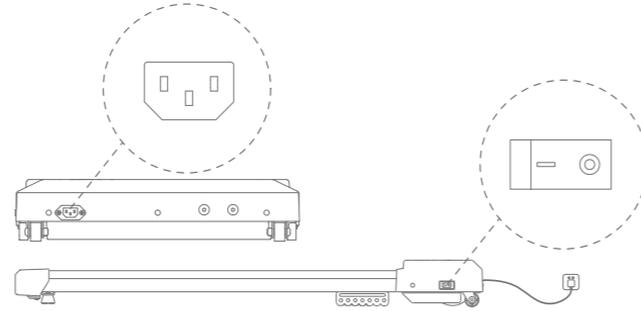

2. Plug in power cord and switch on power rock button, you can hear a Bi sound from buzzer, its means the circuit of appliance has connected with power electricity.

Warning: MUST use power cord with comes of package.

9 FUNTION MENU

12:38

TIME

Display Time
0-99:59

2.2

SPEED

Display Speed
0.6-4 mph

16.38

DIST

Display Distance
0-99.99 mile

2268

KCAL


Display Calories
0-6553

Tips: The workout datas (Calorie; Time; Step; Distance; Speed) will be alternated display Per 4 seconds.

10 REMOTE CONTROL

Note: Ensure that the walking treadmill is power on and the remote control is installed with batteries.

1. Operation of Remote Controller

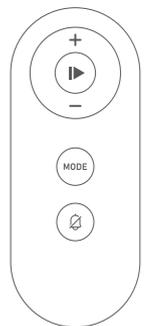

Buttons	Operation	Note
▶	Short press	Start the walking treadmill
	Long press for 2"	When the walking treadmill stop (all datas recover to 0), the screen will display "END". 10 minutes later, the system will switch to the economic mode and turn off the display screen; Press any buttons to wake up the treadmill.
	Short press (in start mode)	The screen will display "PAU", previous workout metrics will be preserved automatically if pause time no longer than 10minutes, otherwise metrics data will be recovered to "0"; Press any buttons to wake up the treadmill. The treadmill will re-start at the minimum speed by re-pressing ▶.
MODE	Short press	Customize countdown workout programs (like as: Time; Distance; Steps; Calories)
+	Short press	Long press over 0.5 seconds, the speed will be increased continuously.
-	Short press	Long press over 0.5 seconds, the speed will be decreased continuously.
🔇	Short press	Short press: Muted buzzer voices

11 ERROR CODE

When error occurs, error warning indicator will light up and display its error code.

Error Code	Fault Analysis	Resolutions
E01	Communcation interrupted.	Unscrew motor hood to verify signal cable whether was pinched or terminal loosen.
E02	The motor wire is loose or failing off, or the carbon brush is worn out.	Check whether the motor cable is loose or failing off. If it does not fall off, check whether the carbon brush of the motor is worn out. If it is worn out, replace the motor. If it is not worn out, the electric controller is damaged. Replace the electric controller.
E04	Overloading protection	1. User weight over limited 110KG. 2. Removal foreign bodies which causes of roller or walking belt. 3. Inject lubricants.
Abnormal display	External disturbance.	Turn off power switch, turn on it after one minute.

Not only error code appeared but also built in buzzer alarm, Once error code and alarm happened, you MUST stop workout immediately, Please contact with after sale service if problem CAN NOT be solved after restart.

12 TROUBLESHOOTING

Problem	Fault Analysis	Resolutions
No working	<ol style="list-style-type: none"> 1. Power rock switch dysfunction 2. Power supply interrupted. 3. Power cord damaged. 	<ol style="list-style-type: none"> 1. Replace new power rock switch if it doesn't light on. 2. Make sure that power cord is plugged into properly grounded outlet. 3. Replace new power cable.
Walking belt slips	Walking belt loosen	Tighten walking belt tension with hex tool. (See details of chapter 12-A)
Remote control does not work	<ol style="list-style-type: none"> 1. Incorrect use of default 2. Battery power shortage. 3. Remote control malfunction 	<ol style="list-style-type: none"> 1. Replace new battery cells. 2. Replace new remote control.
Friction noise	Walking belt off center.	See details of chapter 12-A.

13 CARE AND MAINTENANCE

A. Symptom : walk belt off centered or slips.

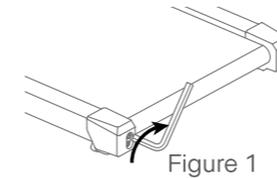


Figure 1

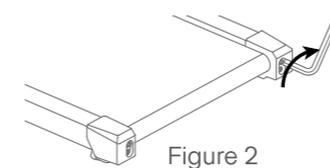


Figure 2

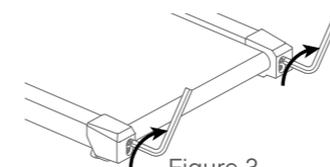


Figure 3

Centering walk belt process as follow :

1. Power off appliance and unplug the power cord .
2. Manual centering process as follow:
 - If the walk belt has shifted to left, use the hex tool to turn the left idler roller screw clockwise **1/4** of a turn(refer to figure 1).
 - If the walk belt has shifted to right, use the hex tool to turn the right idler roller screw clockwise **1/4** of turn(refer to figure 2).
3. Appliance **MUST** work 1-2minutes. Repeat manual centering process until the walk belt is centered.


Belt slip correcting process as follow :

1. Power off appliance before operation.
2. Using the hex tool, turn both idler roller screws clockwise **1/2** of turn(refer to figure 3).
3. After corrected, please attempts to walking 1-2 minutes under 1.0 mph speed setting. Repeat until the walk belt is properly tightened.

Attentions


1. To prevent any injury, don't place any debris around appliance before maintenance process.
2. **MUST** use associated hex tool.
3. Take care at maintenance process. Do not pinch fingers.

B. Belt lubrication process, follow instruction below to lubricate belt.

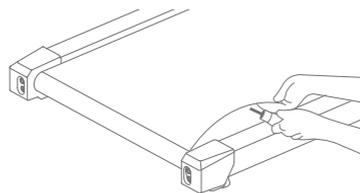

1. Power off appliance and unplug cord.
2. Using the hex tool, turn both idler roller screws counterclockwise till belt loosen and lifting easily.
Tips: please markdown hex tool rotating cycles when loosen belt, which use for adapting belt tension after lubrication process.
3. Lifting edges of belt and spraying lubrication oil at center of walk platform evenly. Not necessary to apply spray lubrication oil on entire walk platform.
4. Lubrication oil volume Per time of maintenance: 5-10mL.
Attention: it would causes of belt slip if spray too much.
5. Using the hex tool, turn the both idler screws clockwise as previous markdown number of turns untill walk belt tighten properly.
6. Power on appliance and workout for a few minutes, in order to spread lubrication oil to whole belt surface evenly.
Attention: No-loading work at 1.0mph speed setting.
Lubrication frequency: High recommend 125 Miles Per time.

C : Appliance cleaning.

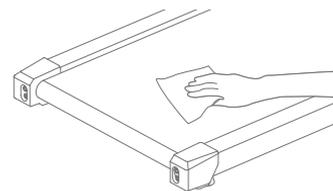

1. Power off appliance and unplug power cord before cleaning.
2. Wipe and clean with damp cloth, Do not cleaning with acidic or caustic detergents.
3. Do not clean opposite of walk belt.
4. Its normal few black powders residual under appliance after long working.

14 WARRANTY

MANUFACTURER'S LIMITED WARRANTY

UREVO warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with UREVO Owner's Manual. UREVO's obligation under this warranty applies to the following:

COMPONENT LENGTH OF WARRANTY

Structural Frame 1 year For Home Use Only
All Other Components 90 days For Home Use Only

Exclusions from Warranty Coverage:

UREVO does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, any product failure, product malfunction, or damages attributable to:

1. Improper installation and/or failure to abide by UREVO's installation guidelines;
2. Use of this product beyond normal home use, or in an application for which it was not designed;
3. Cosmetic items such as scratches, dents or discolorations;
4. Damage caused by normal wear and tear, vandalism, accidental or by animals;

5. Any act of Nature (such as fire, flooding, snow, ice, hurricanes, earthquakes, lightnings or other natural disasters), environmental condition (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.);
6. Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to among other things, flake, chalk, accumulate dirt or stains.
7. Improper operation, alteration, handling, storage, abuse or neglect of the products.

UREVO , using its sole discretion, will either repair or replace free of charge any part(s) proven to be defective under normal home use. Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product's warranty. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.

When ordering replacement parts please have the following information ready:

1. Order Number
2. Description of Parts
(Adding photos or videos would be helpful)
3. Part Number
4. Date of Purchase

Warning!

- (1) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- (2) Even used batteries may cause severe injury or death.
- (3) Call a local poison control center for treatment information.
- (4) The compatible battery type CR2032 3V.
- (5) Non-rechargeable batteries are not to be recharged.
- (6) Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- (7) Ensure the batteries are installed correctly according to polarity (+ and -).
- (8) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- (9) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local

regulations.

- (10) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

⚠ WARNING	
<ul style="list-style-type: none">• INGESTION HAZARD: This product contains a button cell or coin battery.• DEATH or serious injury can occur if ingested.• A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours• KEEP new and used batteries OUT OF REACH of CHILDREN• Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

